



Screw spring loaded ball bearing bolt from inside toward the front until it inserts into the index ring Pos. 117 and has no more play. In this position add some Loctite and let it dry.

Replace swing arm and lever and tighten with hand grip

Replace bottom plate

Novatech, Inc.
www.NovatechOnline.com

